

## Discover the New Features

ET Avastage uued funktsioonid. LV Atkālējiet jaunās funkcijas  
LT Atskrīt jaunas funkcijas. PL Odkryj nowe funkcje

### EN Download IQOS App

Use the IQOS app to adjust device settings and customize your experience.\*

Visit [www.iqos.com/apps](http://www.iqos.com/apps)

\*Availability of the IQOS App may vary depending on the country.

### ET Laadige alla IQOS rakendus

Kasutage IQOS rakendust seadme seadete kohandamiseks ja oma kasutuskogemuse isikupärasdamiseks.\*

Külastage [www.iqos.com/apps](http://www.iqos.com/apps)

\*IQOS rakenduse saadavus võib riigi erineda.

### LT Atsisūskite IQOS programēlē

Naudodamies IQOS programēlē koreguokite ierenginio nustatymus ir individualizuokite savo patirti.\*

Apslankykite [www.iqos.com/apps](http://www.iqos.com/apps)

\*IQOS programēlēs prieinamumus gali skirsi priklasomai nuo šeles.

### LV IQOS lietotnes lejupielādešana

Izmantojiet IQOS lietotni\*, lai pielāgotu ierices iestatījumus un savu priedzi.

Apmeklējiet [www.iqos.com/apps](http://www.iqos.com/apps)

\*IQOS lietotnes var nebūt pieejamas jūsu valstī. Ja tās nav pieejamas jūsu valstī, ierices iestatījumus un priedzes pielāgošanu varat, mainīt, vērsties jebkura IQOS veikalisse.

### PL Pobierz aplikację IQOS

Użyj aplikacji IQOS, aby dostosować ustawienia urządzenia i spersonalizować swoje doświadczenia.\*

Odwiedź [www.iqos.com/apps](http://www.iqos.com/apps)

\*Dostępność aplikacji IQOS może się różnić w zależności od kraju.




## Pause Mode

ET Pause mode LV Pauzes režīms  
LT Pauzēs režīms PL Tryb pauzy

### Pause Mode Available

EN Pause Mode Available  
Two vertical dashes on Touch Screen indicate Pause Mode availability. Swipe DOWN across entire Touch Screen to pause experience.  
Pause Mode can be used once in the first or second consecutive use, and can be activated within the first 3 minutes, or 8 puffs of the experience.

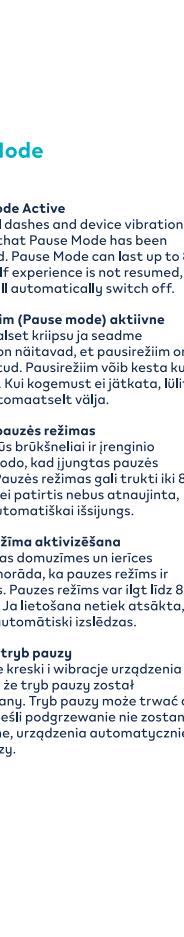


### Pause Mode Active

EN Pause Mode Active  
4 vertical dashes and device vibration indicate that Pause Mode has been activated. Pause Mode can last up to 8 minutes. If experience is not resumed, Holder will automatically switch off.



### Resume Experience

EN Resume Experience  
Swipe UP across entire Touch Screen and wait for reheating to complete before resuming experience. Vibration and Light Guide will indicate Holder is ready to resume use.

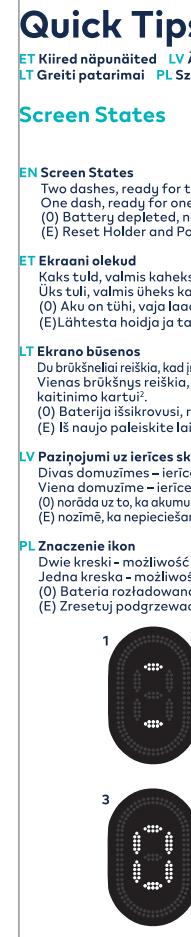


## FlexPuff

ET FlexPuff LV FlexPuff  
LT FlexPuff PL Szymbkie porady

### Screen States

EN Screen States  
Two dashes, ready for two uses<sup>1</sup>.  
One dash, ready for one use<sup>2</sup>.  
(O) Battery depleted, need to recharge<sup>3</sup>.  
(E) Reset Holder and Pocket Charger<sup>4</sup>.

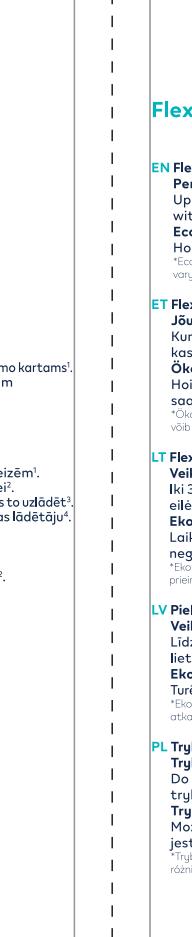


## Quick Tips

ET Kiiret näpunäited LV Ätrie padomi  
LT FlexPuff PL Szymbkie porady

### Flex Battery Modes

EN Flex Battery Modes  
**Performance Mode (default)**  
Up to 3 consecutive uses without Pause or 2 consecutive uses with Pause for one of them.  
**Eco Mode\***  
Holder is set for a single use. **Pause Mode is not available.**

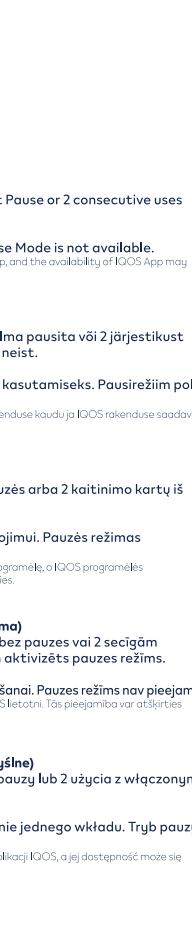

### To Reset

EN To Reset  
Place Holder in Pocket Charger and press Pocket Charger Button for 10 seconds. All Status Lights will turn OFF, and turn ON to confirm a RESET. If problem persists, contact IQOS Support.

